


# Technical Data Sheet

## Allbond™ Acrylic bonding agent

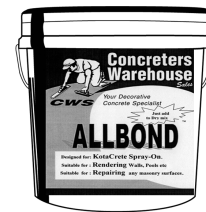

<b>Product</b>	Allbond™ is a multi-purpose high strength acrylic bonding agent. Can be used with any premixed sand cement mixes or cement mortar. Helps adhesion of new concrete to existing concrete.
<b>Usage</b>	For the application of Kotacrete™ Spray-on system. Equally as good for Rendering Walls, Pools, or repairing of any masonry surfaces. Suitable for Industrial and Domestic applications.
<b>Benefits</b>	Weather & water proof, stain & chemical resistant, long lasting, Non-Toxic, non-flammable, non- hazardous, contains no solvents.
<b>Coverage</b>	Depending on application or repairs.
<b>Package</b>	20lt, 5lt, 1lt pail.
<b>Storage</b>	<ul style="list-style-type: none"><li>• Store in cool dry area and out of direct sunlight.</li><li>• Keep pails closed when not in use to prevent skimming.</li></ul>
<b>Shelf Life</b>	Approximately 12 months, providing stored correctly and unopened.
<b>Handling</b>	<ul style="list-style-type: none"><li>• Lifting without due care could result in personal injury.</li><li>• Avoid contact with skin and eyes.</li><li>• Wear suitable protective equipment.</li></ul>
<b>Properties</b>	Appearance: Milky White Liquid Percentage Volatiles: 60%
<b>Surface Preparation</b>	All surfaces must be clean and free from all foreign matter, grease, fungus, sealers, dust, loose toppings etc. A cleaned surface will maximize bond. To remove build up of surface matters use a high pressure washer. If concrete has been sealed, use sealer stripper to remove the sealer. <b>To remove sealer</b> , refer to Sealer Strippa Product data sheet. <b>To remove grease and oil stains</b> wet area with hot water then apply Cleanall scrub with a broom, on and around the area. Allow to sit minimum of 5 minutes, DO NOT allow to dry. Wash down with a high pressure water blast. Walls usually require only a pressure wash. Cement sheet bases must be clean before applying prime coat, cracks or depressions must be repaired. This can be achieved by using an amount of the base coat mix. <b>To remove moss or fungus</b> dilute bleach 1 to 10 parts water into a watering can, apply over the surface and allow to sit for minimum of 2 hours, before hosing down with a high pressure water blast.
<b>Mixture Preparation</b>	Add 1 part of Allbond™ to 2 parts clean water into a clean bucket, mix thoroughly. Gradually add Statop™, mixing continuously using a drill fitted with a mixer, until you achieve a mortar type mixture.
<b>Application</b>	<b>For the application of Kotacrete™ Spray-On:</b> Refer it's application guidelines. <b>For concrete repairs:</b> Mix 1 part Allbond™ with two parts water. To this add cement and sand at the ratio of 1 part cement to 2.5 parts sand, or premixed mortar and mix to a workable slurry. Work the surface with a wood float or straight edge, for a smooth finish trowel lightly with a steel trowel and avoid excessive trowelling.

#### Disclaimer

The information given is based on our knowledge of the health and safety data of this product, at the time of publication, and is given in good faith. The attention of the user is drawn to the possible risks incurred by using the product for any purpose other than that for which it was intended. If clarification or further information is needed to enable appropriate risk assessment, the user should contact Bescon Industries. Responsibility for products sold is subject to our standard terms and conditions sent to customers. No liability whatsoever can be accepted with regard to the handling, processing or use of the product concerned which, in all cases, shall be accordance with the appropriate regulations and / or legislation.